


INSTALLATION MANUAL

Shower Head

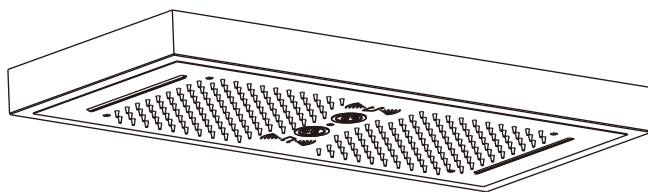

ENGLISH

SAFETY NOTES

- ⚠ WARNING: To prevent product failure, property damage, and personal injury, please follow these guidelines:
- ⚠ The shower is designed exclusively for bathing, personal hygiene, and body cleaning purposes.
- ⚠ The shower arm is intended solely to support the showerhead. Do not hang any additional items from the shower arm.
- ⚠ Regularly clean your CRANACH product as needed to prevent the buildup of mineral scale and/or soap residue.
- ⚠ Please refer to the Care And Cleaning when choosing a cleaning agent for this product. Avoid using cleaning products that contain chlorine bleach, lye, hydrochloric acid, formic acid, acetic acid, or abrasive materials.
- ⚠ FAILURE TO ADHERE TO THESE INSTRUCTIONS MAY LEAD TO PRODUCT DAMAGE, MALFUNCTION, AND VOIDING OF THE WARRANTY.

INSTALLATION CONSIDERATIONS

CRANACH recommends that this unit be installed by a licensed professional plumber.

Before starting the installation, please read these instructions carefully and make sure you have all the required tools and materials on hand.

To avoid the risk of scalding, ensure that the maximum output temperature of the shower mixing valve does not exceed 120°F (49°C).

TECHNICAL INFORMATION

Max. Flow Rate: 1.8 / 2.5 GPM @ 80 PSI MAX

Warranty Services

Scan the QR code to quickly register and activate your product warranty or access warranty-related information.



cranachhome.com/warranty/

Installation Manual

Scan the QR code to instantly access the installation manual for your product. Download it to your device for convenient future reference and to ensure a smooth setup process.



cranachhome.com/installation/

Need instant assistant? Reach out via our 24-hour customer support line at 888.263.8999 or via email at support@cranachhome.com.

 
RECOMMENDED TOOLS TO PREPARE



Safety Glasses



Teflon Tape



Level



 
Hammer



Power Drill



Screwdriver



Pencil



Adjustable Wrench

PARTS IN THE BOX


Read over these instructions thoroughly before beginning installation. Make sure that you have all tools and supplies needed to complete the installation.




Installation Manual




Specification

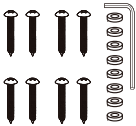


Shower Head Screw Package

 


Shower Head Hose

 

LED Controller

 


Shower Head Body

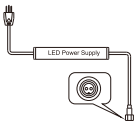


Water Proof Power Supply


OPTION A: SURFACE-MOUNTED

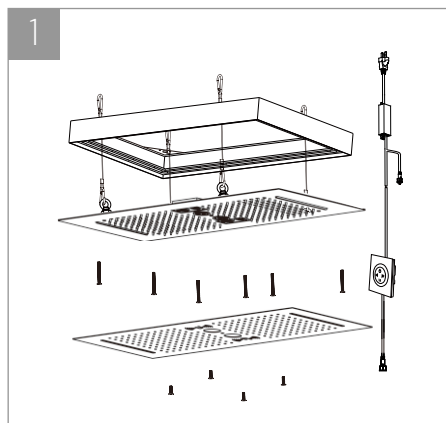


1. Unscrew the decorative shower panel, shower head body, and fix frame respectively, according to the mark (Remove/Install) on the top of the decorative shower panel.

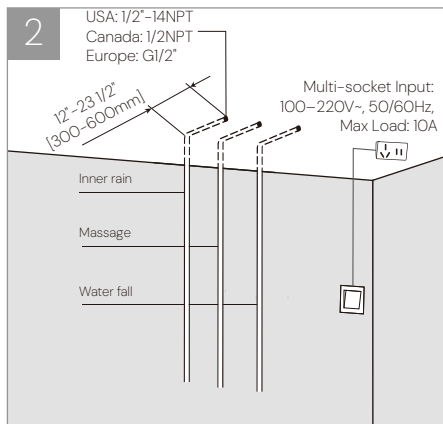


2. Install the power socket in the appropriate position, lay out the water pipeline, and connect it to the valve.

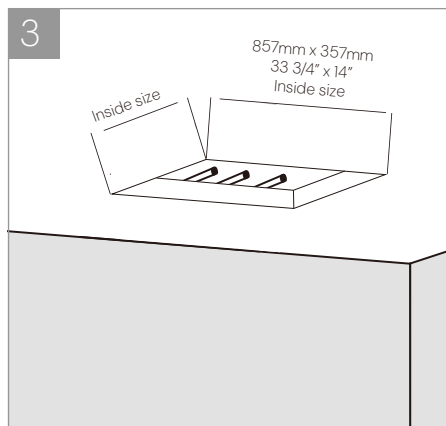


3. Reserve installation holes on the ceiling according to the dimensions shown in the diagram.

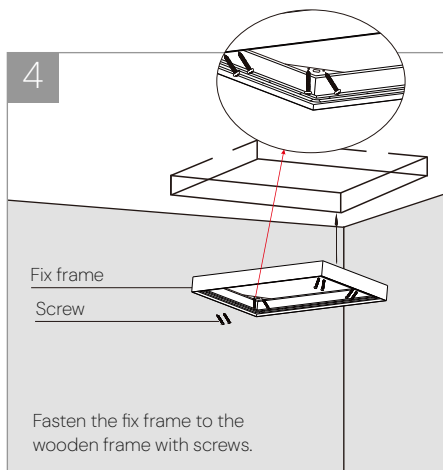


4. Fasten the fix frame to the wooden frame with screws.

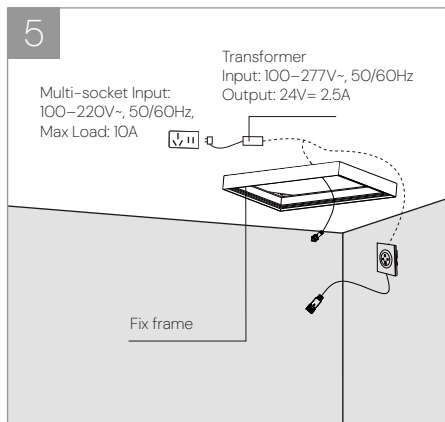


5. Install the transformer, and connect to the power socket illustrated.

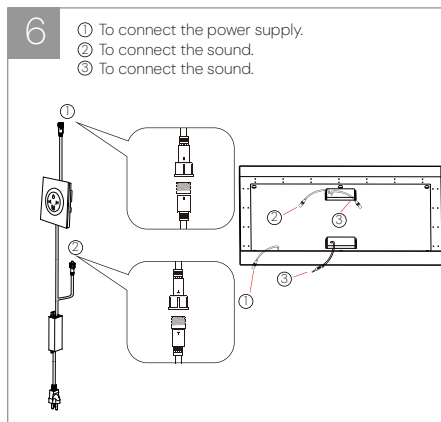


6. Connect the power supply and the music source.

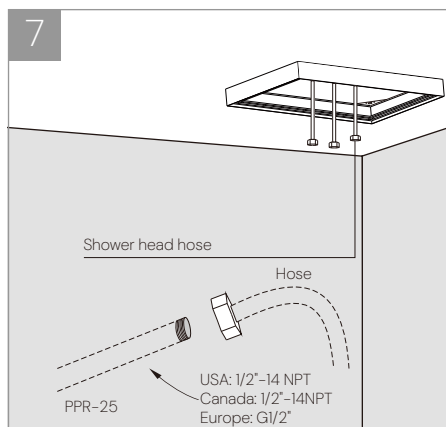


7. Connect one end of the corrugated pipe to the embedded PPR water pipe and the other end to the water inlet pipe on the back of shower head.

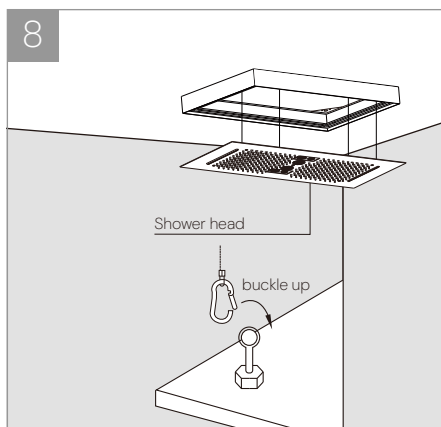


8. Attach the Hook Cable to the rear-mounted ring of the showerhead body.

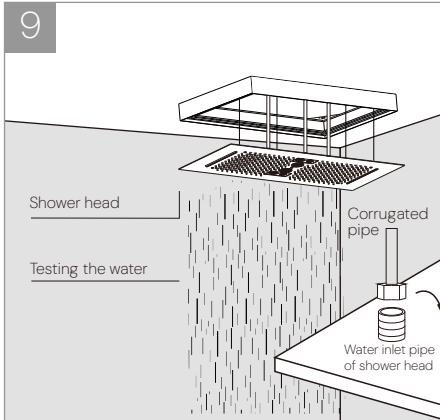

9. Test the overhead shower spray to ensure proper water flow and functionality after installation.

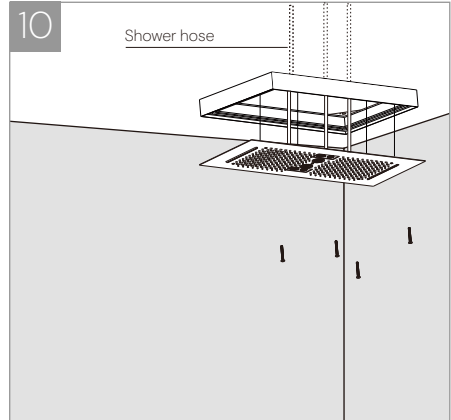


10. After the water test is completed, install the shower head and retighten the screws.

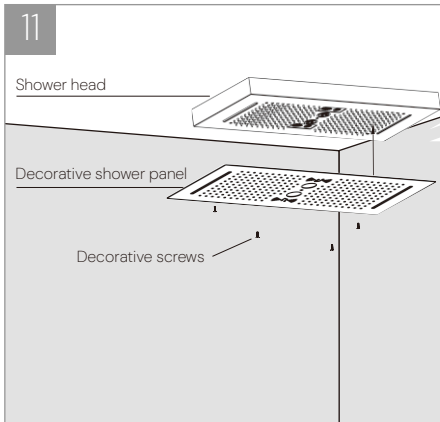


11. Attach the decorative shower panel to the shower head body.


OPTION B: RECESSED-MOUNTED

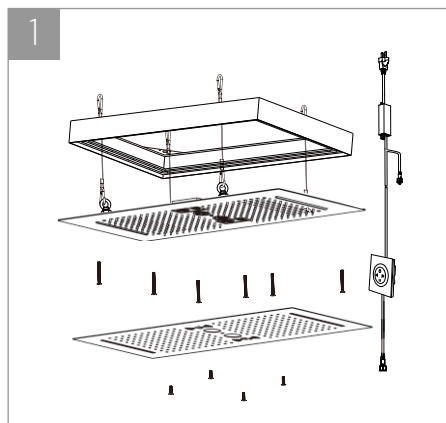


1. Unscrew the decorative shower panel, shower head body, and fix frame respectively, according to the mark (Remove/Install) on the top of the decorative shower panel.

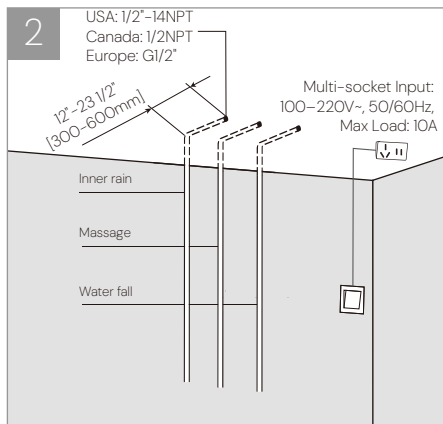


2. Install the power socket in the appropriate position, lay out the water pipeline, and connect it to the valve.

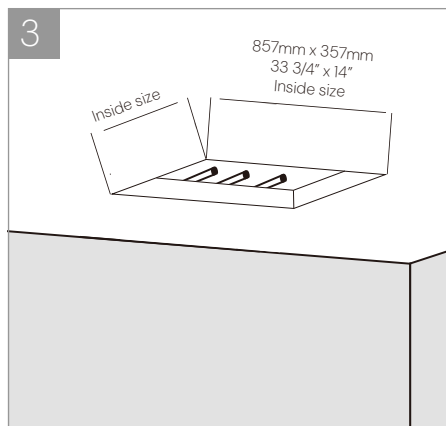


3. Reserve installation holes on the ceiling according to the dimensions shown in the diagram.

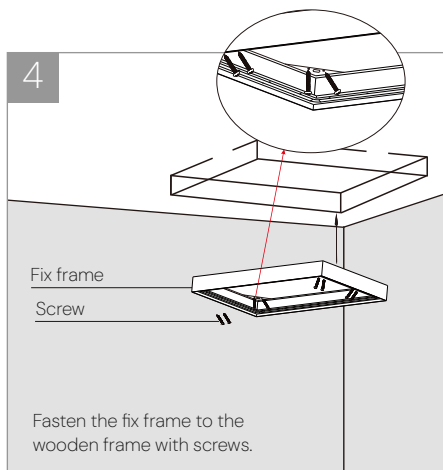


4. Fasten the fix frame to the wooden frame with screws.

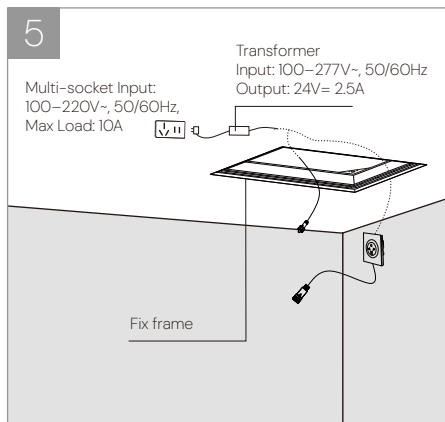


5. Install the transformer, and connect to the power socket illustrated.

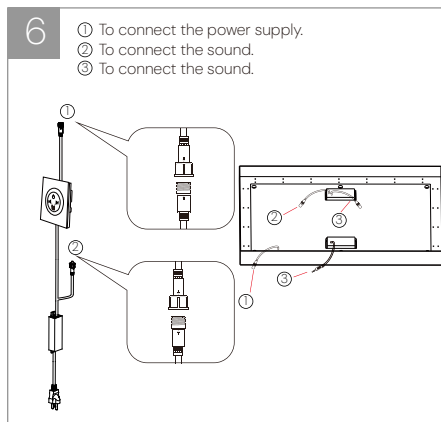


6. Connect the power supply and the music source.

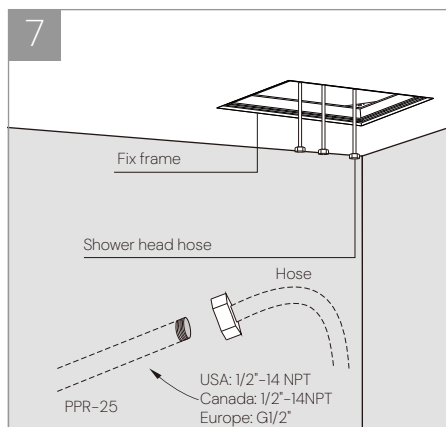


7. Connect one end of the corrugated pipe to the embedded PPR water pipe and the other end to the water inlet pipe on the back of shower head.

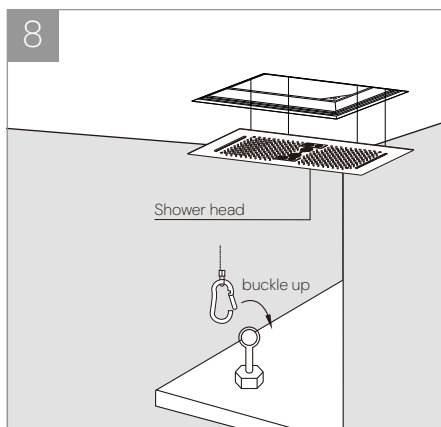


8. Attach the Hook Cable to the rear-mounted ring of the showerhead body.

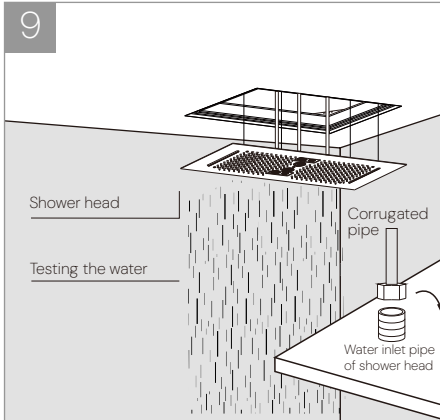

9. Test the overhead shower spray to ensure proper water flow and functionality after installation.

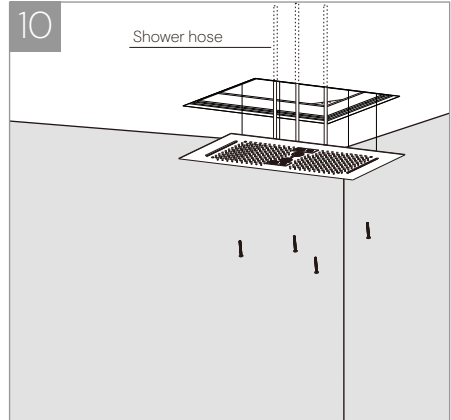

10. After the water test is completed, install the shower head and retighten the screws.

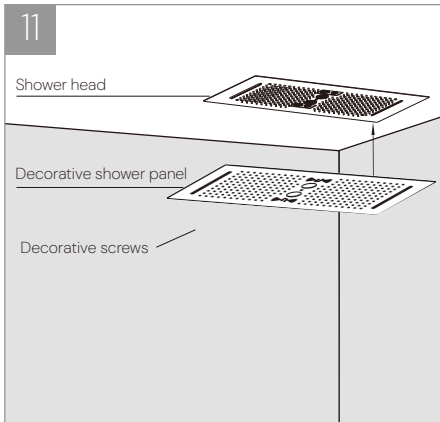

11. Attach the decorative shower panel to the shower head body.

LED CONTROLLER INSTRUCTION

1. When touch the panel, the indicator light will flash.
2. Touch panel there are 4 buttons and a pulley key, the functions are as follows:


Buttons	Function
	Touch this key to turn ON/OFF the controller on any state;
	The Mode key allows you to choose between 11 different lighting modes. Long-pressing this key turns the buzzer on or off.
	Touching this key increases the output signal's brightness or speed. Each touch increases the level by 1 (16 levels total).
	Touching this key decreases the output signal's brightness or speed. Each touch decreases the level by 1.
	Touching this key decreases the output signal's brightness or speed. Each touch decreases the level by 1. (1) Static Color Selection Key: When the current mode is 'M' (Color Mode), press this key to select a static color. (2) Color Cycle Key: This key cycles through 64 different colors (as shown on the color ring).

3. Standard change is shown in the below table:

Mode No.	Function	Remarks
1	Static red	Brightness is adjustable, speed is unadjustable.
2	Static green	
3	Static blue	
4	Static yellow	
5	Static purple	
6	Static cyan	
7	Static white	
8	Three-color jumpy changing	Brightness is adjustable, speed is unadjustable.
9	Three-color gradual changing	
10	Seven-color jumpy changing	
11	Seven-color gradual changing	

MUSIC CONNECTION DESCRIPTION

**TUSE YOUR OWN MOBILE PHONE TO
FREELY CONTROL YOUR FAVORITE MUSIC**

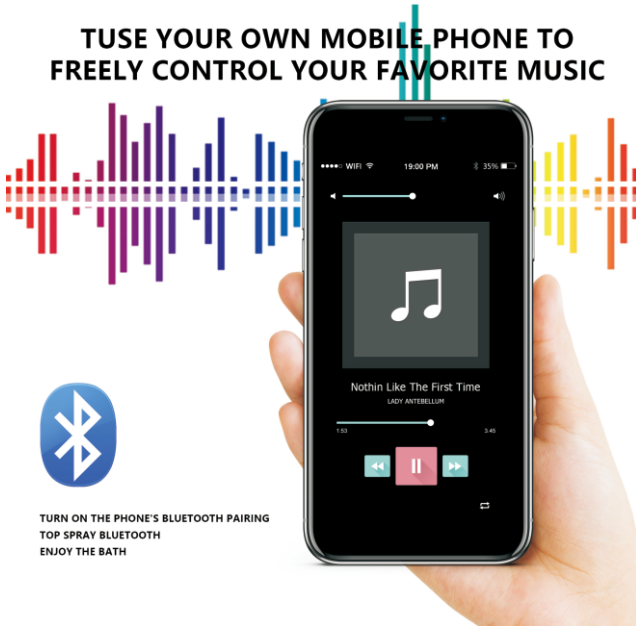

**TURN ON THE PHONE'S BLUETOOTH PAIRING
TOP SPRAY BLUETOOTH
ENJOY THE BATH**

Turn on the Bluetooth of your mobile phone and find the name of the shower head Bluetooth then connect it. So that you can start playing wonderful music.

WARRANTY

Parts and Finishes:

CRANACH warrants all parts (excluding electronic components and batteries) and finishes of this product, purchased from authorized CRANACH sellers, to be free from defects in material and workmanship.

- Residential Use:
Lifetime warranty, for as long as the original consumer purchaser owns the home in which the product is installed.
- Commercial or Multi-Family Use:
For a period of ten (10) years from the date the product is received by the original purchaser or their authorized representative.

Electronic Components:

If applicable, electronic components (excluding batteries) of CRANACH products purchased from cranachhome.com or authorized CRANACH sellers are warranted to the original consumer purchaser to be free from defects in material and workmanship.

- Residential Use:
For a period of five (5) years from the date the product is received.
- Commercial or Multi-Family Use:
For a period of one (1) year from the date the product is received.

What We Will Do:

During the applicable warranty period, if a defect is found in material or workmanship under normal installation, use, and service, CRANACH will provide replacement parts free of charge. Before returning your product to CRANACH, please visit our website or contact our customer service team (via phone or email) for troubleshooting assistance.

Exclusions & Limitations:

This warranty does not cover:

- Damage caused by abuse, misuse, improper care, lack of maintenance, or improper installation.
- Damage from freezing water or excessive water pressure.
- Damage from abrasive cleaning products or use in violation of applicable codes or regulations.
- Labor charges incurred during installation, removal, or repair of the product.
- Incidental or consequential damages.



7933 Ley Rd
Houston, TX, 77028
cranachhome.com