


CRANACH

INSTALLATION MANUAL

Shower Head

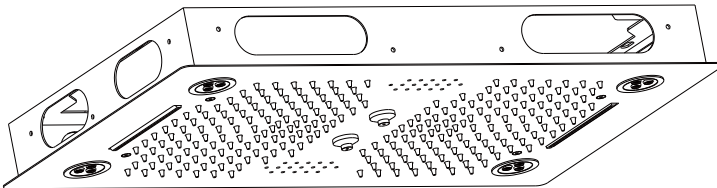

C10.RK01

ENGLISH

SAFETY NOTES

- ⚠ WARNING: To prevent product failure, property damage, and personal injury, please follow these guidelines:
- ⚠ The shower is designed exclusively for bathing, personal hygiene, and body cleaning purposes.
- ⚠ The shower arm is intended solely to support the showerhead. Do not hang any additional items from the shower arm.
- ⚠ Regularly clean your CRANACH product as needed to prevent the buildup of mineral scale and/or soap residue.
- ⚠ Please refer to the Care And Cleaning when choosing a cleaning agent for this product. Avoid using cleaning products that contain chlorine bleach, lye, hydrochloric acid, formic acid, acetic acid, or abrasive materials.
- ⚠ FAILURE TO ADHERE TO THESE INSTRUCTIONS MAY LEAD TO PRODUCT DAMAGE, MALFUNCTION, AND VOIDING OF THE WARRANTY.

INSTALLATION CONSIDERATIONS

CRANACH recommends that this unit be installed by a licensed professional plumber.

Before starting the installation, please read these instructions carefully and make sure you have all the required tools and materials on hand.

To avoid the risk of scalding, ensure that the maximum output temperature of the shower mixing valve does not exceed 120°F (49°C).

TECHNICAL INFORMATION

Max. Flow Rate: 1.8 / 2.5 GPM @ 80 PSI MAX

Warranty Services

Scan the QR code to quickly register and activate your product warranty or access warranty-related information.



cranachhome.com/warranty/

Installation Manual

Scan the QR code to instantly access the installation manual for your product. Download it to your device for convenient future reference and to ensure a smooth setup process.



cranachhome.com/installation/

Need instant assistant? Reach out via our 24-hour customer support line at 888.263.8999 or via email at support@cranachhome.com.

 
RECOMMENDED TOOLS TO PREPARE



Safety Glasses



Teflon Tape



Level



 
Hammer



Power Drill



Screwdriver



Pencil



 
Adjustable Wrench

PARTS IN THE BOX

Read over these instructions thoroughly before beginning installation. Make sure that you have all tools and supplies needed to complete the installation.




Installation Manual



Specification



Warranty Card

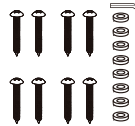


Shower Head Screw Package



Shower Head Hose



 
LED Controller




Shower Head Body



Controller Pedestal

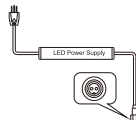


Water Proof Power Supply

 


WIFI Controller


INSTALLATION

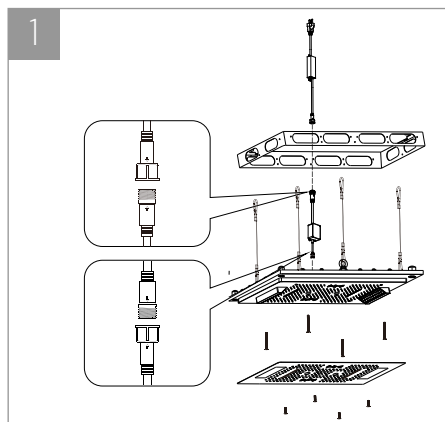


1. Unscrew the decorative shower panel, shower head body, and fix frame respectively, according to the mark (Remove/Install) on the top of the decorative shower panel.

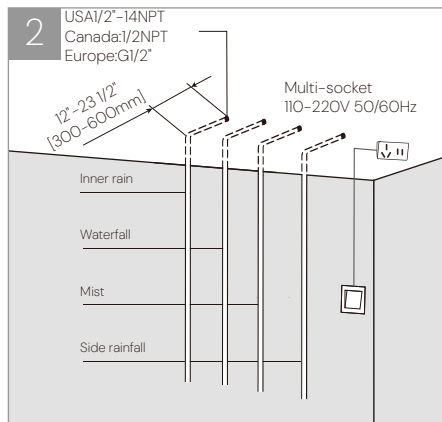


2. Install the power socket in the appropriate position, lay out the water pipeline, and connect it to the valve.

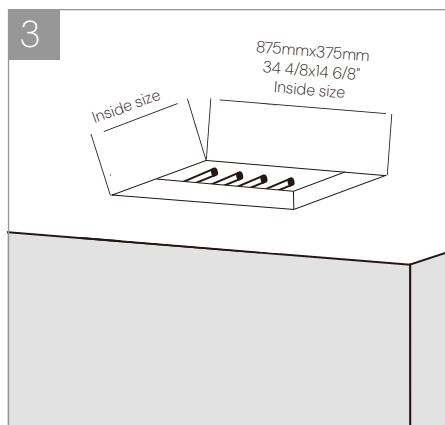


3. Reserve installation holes on the ceiling according to the dimensions shown in the diagram.

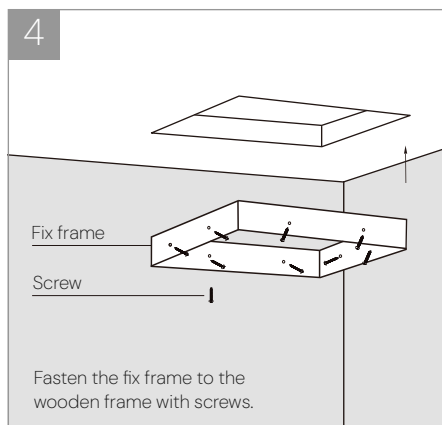


4. Fasten the fix frame to the wooden frame with screws.

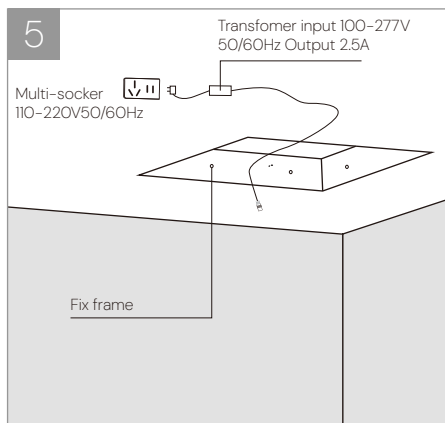


5. Install the transformer, and connect to the power socket illustrated.

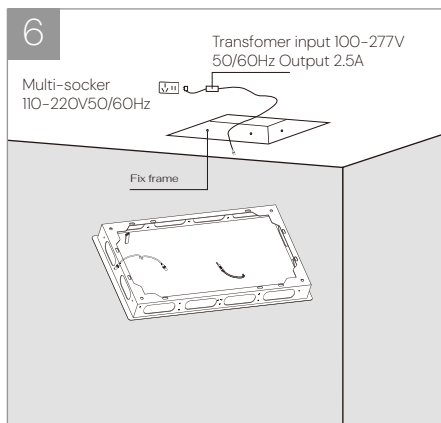


6. Connect the WiFi controller and power supply. Secure connections with electrical tape and fix the frame.

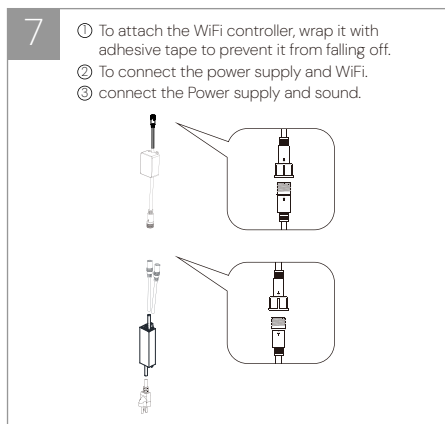


7. Connect the WiFi controller to the power supply and secure it with adhesive tape.

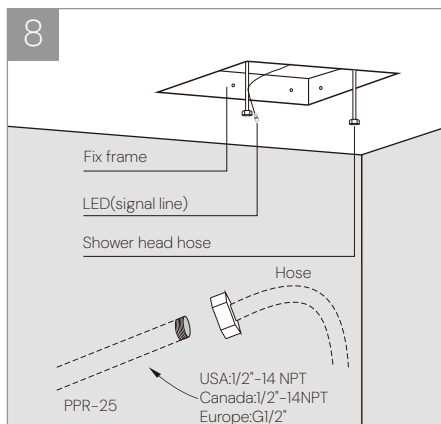


8. Connect the corrugated pipe between the embedded water pipe and the rear water inlet of the shower head.

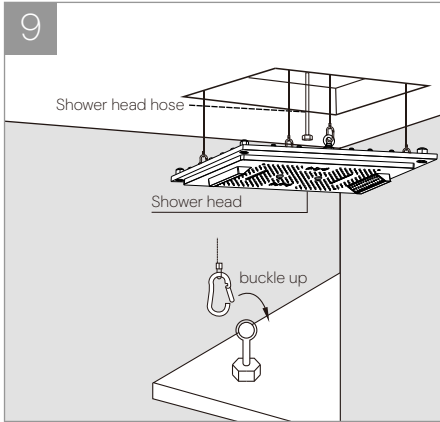

9. Install the main body of the overhead shower.

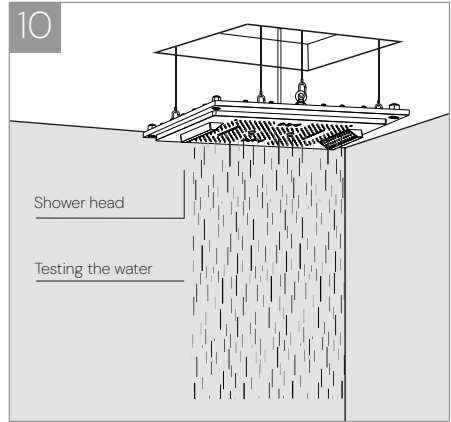


10. Test the overhead shower spray to ensure proper water flow and functionality after installation

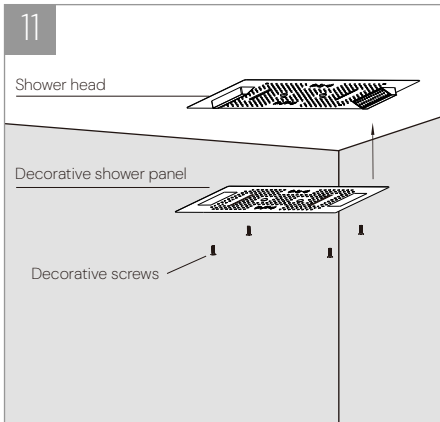

11. Attach the decorative shower panel to the shower head body.

LED CONTROLLER INSTRUCTION

The touch remote features 9 touch keys, each designed for specific functions as follows:

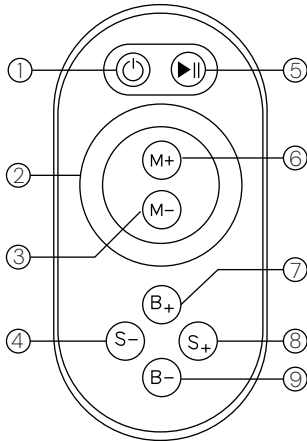

- ①Turn ON/OFF
- ⑤Mode Switch
- ② Color Touch Ring
- ③/⑥ Color Temperature adjusting
- ④/⑧ Dynamic Speed adjusting
- ⑦/⑨ Dynamic Brightness adjusting

Mode:

NO.	FUNCTION	REMOTE
1	Static red	Brightness is adjustable. Speed is unadjustable.
2	Static green	
3	Static blue	
4	RGB Jumping	
5	Static blue-green	
6	Static yellow	
7	Static white	
8	Static purple	Brightness is adjustable. Speed is adjustable.
9	RGB Gradual	
10	7-Colors Jumping	
11	7-Colors Gradual	

Power supply management:
The remote will enter standby mode (untouchable state) if pressed for more than 20 seconds. If this occurs, please slightly shake it once and the remote will return to normal working state (touchable state).

Indicator light instruction:
1. When the PWR indicator light is bright, the remote is either idle or sending a signal; when the PWR light is off, it will enter standby mode.
2. When RF is bright, it means the remote is sending signal; off means there is no signal sending.

- Remarks:
- 1. This product should be commissioned and installed by qualified personnel.
 - 2. This product cannot be waterproof; it needs to be protected from sun and rain. If installed outdoors, please use a waterproof box.
 - 3. Good heat dissipation conditions will extend the life of the LED controller. Please install the product in a well-ventilated environment.
 - 4. Please do not install or use such products in lightning, thunder, strong magnetic or high voltage applications.
 - 5. Please check whether the output voltage of the LED power supply used meets the product voltage range requirements.
 - 6. The diameter of the wire used must be sufficient to support the connected LED luminaire, and ensure that the wiring is secure to avoid the wire overheating or poor contact triggering an accident.
 - 7. Before power-on debugging, ensure that all wiring is correct to avoid damage to the luminaire due to wiring errors.

WARRANTY

Parts and Finishes:

CRANACH warrants all parts (excluding electronic components and batteries) and finishes of this product, purchased from authorized CRANACH sellers, to be free from defects in material and workmanship.

- Residential Use:
Lifetime warranty, for as long as the original consumer purchaser owns the home in which the product is installed.
- Commercial or Multi-Family Use:
For a period of ten (10) years from the date the product is received by the original purchaser or their authorized representative.

Electronic Components:

If applicable, electronic components (excluding batteries) of CRANACH products purchased from cranachhome.com or authorized CRANACH sellers are warranted to the original consumer purchaser to be free from defects in material and workmanship.

- Residential Use:
For a period of five (5) years from the date the product is received.
- Commercial or Multi-Family Use:
For a period of one (1) year from the date the product is received.

What We Will Do:

During the applicable warranty period, if a defect is found in material or workmanship under normal installation, use, and service, CRANACH will provide replacement parts free of charge. Before returning your product to CRANACH, please visit our website or contact our customer service team (via phone or email) for troubleshooting assistance.

Exclusions & Limitations:

This warranty does not cover:

- Damage caused by abuse, misuse, improper care, lack of maintenance, or improper installation.
- Damage from freezing water or excessive water pressure.
- Damage from abrasive cleaning products or use in violation of applicable codes or regulations.
- Labor charges incurred during installation, removal, or repair of the product.
- Incidental or consequential damages.

CRANACH

7933 Ley Rd
Houston, TX, 77028
cranachhome.com