


CRANACH
BATH & KITCHEN

INSTALLATION MANUAL

Robe Hook



C81.AN01_C81.FA01_C81.RU01



C81.AN01



C81.FA01



C81.RU01

PARTS IN THE BOX

Read over these instructions thoroughly before beginning installation. Make sure that you have all tools and supplies needed to complete the installation.



Installation
Manual



Specification




Spare Parts



Robe Hook

INSTALLATION

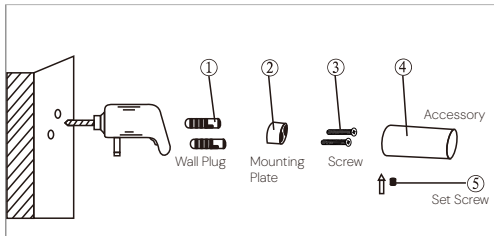

1. Determine Positions:

Mark the desired locations on the wall for each accessory.

2. Drill Holes and Install Wall Plugs:

Use an electric drill to create holes at the marked positions, then insert the wall plugs securely.

3. Fix Mounting Plates:

Secure the mounting plate with screws and loosen the set screw (but do not completely remove it). Place the accessory over the mounting plate, ensuring the set screw is at the bottom.

Warranty Services

Scan the QR code to quickly register and activate your product warranty or access warranty-related information.

Installation Manual

Scan the QR code to instantly access the installation manual for your product. Download it to your device for convenient future reference and to ensure a smooth setup process.

Need instant assistant? Reach out via our 24-hour customer support line at 888.263.8999 or via email at support@cranachhome.com.



cranachhome.com/warranty/



cranachhome.com/installation/



7933 Ley Rd
Houston, TX, 77028
cranachhome.com

Installation_C81LAN01_C81FA01_C81RU01_Rev1.1